

Field Settings for Transtank SCAMP Overfill Alarms

T2.25 & T4.5

Scamps are sent from the Transtank factory preset. Once installed on the tank the distance from the top of the Tank to the bottom of the electronic box should be 285mm.



Field Settings for Transtank SCAMP Overfill Alarms

T12 to T105

Scamps are sent from the Transtank factory preset. Once installed on the tank, the distance from the top of the Tank to the bottom of the electronic box should be 150mm.

